

P/N	DESCRIPTION
-120-24355-001/120-24355-501 -120-31887-001/120-33340-001 -120-39481-001/120-39864-001 -120-42830-001	AUTO PILOT TRANSFER BOX
-120-31423-001/120-34343-001 -120-38844-001/120-48946-001	OBSERVER AUDIO PANEL
-066-1024-03,-04,-05,-06,-07,-08,-09,-10 -066-1024-11,-12,-13,-14,-15,-16	KM20/KR21
- 622-6389-001/ 622-6389-002/ 622-6389-011 - 622-6389-012/ 622-6390-001/ 622-6390-002 - 822-1111-001/ 822-1112-001/ 622-6152-001 - 622-6152-002/ 622-6152-011/ 622-6152-012 - 622-6152-021/ 622-6152-022/ 622-6152-023 - 622-6152-031/ 622-6152-032/ 622-6152-033 - 622-6153-001/ 622-6153-002/ 622-6153-021 - 622-6153-022/ 622-6153-023/ 822-1113-001 - 822-1113-021/ 822-1114-001/ 822-1114-021 - 822-1113-023/ 822-1114-023	VHF 21( ),22( )
-066-1055-00,-01,-02,-03	KM24
-066-01050-0050 -066-01050-0051 -066-01050-0052 -066-01050-0053 -066-01050-0054	KM24H-50/54
-066-01055-0060	KMA24H-60
-066-01055-0065 -066-01055-0066 -066-01055-0067 -066-01055-0068	KMA24H-65/68
-066-01055-0070 -066-01055-0071	KMA24H-70/71
-066-01155-0101 -066-01155-0201	KMA26

<p>-064-01019-0000 -064-01019-0002 -064-01019-0006 -064-01019-0010 -064-01019-0012 -064-01019-0001 -064-01019-0005 -064-01019-0007 -064-01019-0011</p>	<p>KY196/197</p>
<p>-064-01020-0000 -064-01020-0001 -064-01020-0003 -064-01020-0004</p>	<p>KY 92</p>
<p>- 064-01052-0010 - 064-01052-0030 - 064-01052-0050 - 064-01052-0060 - 064-01052-0070 - 064-01052-0011 - 064-01052-0031 - 064-01052-0051 - 064-01052-0061</p>	<p>KY 96A/97A</p>

<p>-63333-000 -63333-005  -63333-001 -63333-007  -63333-002 -63333-004</p>	<p>TELEX MODEL 500T</p>
<p>-AIRMAN 750/AIRMAN 760</p>	<p>TELEX HEADPHONE/TELEX HEADSET</p>
<p>-63274-000,-001,-002,-003,-004,-005  -63274-006,-008,-010,-011,-012</p>	<p>TELEX MODEL HS-500 HANDSET</p>
<p>-64000-000,-100,-001,-002,-101,-102  -64000-003,-103</p>	<p>TELEX MODEL 5X5 PRO SERIES HEADSET</p>
<p>-ALL</p>	<p>DAVID CLARK</p>
<p>-ST3400XXX</p>	<p>ST 3400 TAWS/RMI</p>
<p>-SN3500-XXX</p>	<p>SN 3500 EHSI NAVIGATION DISPLAY</p>
<p>-SA4550-XXX</p>	<p>SA4550 PRIMARY NAVIGATION DISPLAY</p>
<p>-SN3308-XXX</p>	<p>SN3308 EHSI NAVIGATION DISPLAY</p>
<p>-120-30151-001  -120-30151-501</p>	<p>EFIS OVERHEATING ALARM PANEL</p>
<p>-ALL</p>	<p>TRANSPONDER</p>

<p>-066-01141-0101 -066-01141-0201 -066-01141-1101</p>	<p>KT 70</p>
<p>-066-01141-5101 -066-01141-5201 -066-01141-6101 -071-00030-0000 -071-00030-0001</p>	<p>KT 71 ATC</p>
<p>-066-01062-0000 -066-01062-0001 -066-01062-0002 -066-01062-0010 -066-01062-0020</p>	<p>KT 76A/78A</p>
<p>-066-01156-0101 -066-01156-0201</p>	<p>KT 76C</p>
<p>-066-01053-0000 -071-01268-0000 -071-01268-0001</p>	<p>KT 79</p>
<p>-DK100 -DK120 -DK130 -DK140</p>	<p>DUKANE SEACOM UNDERWATER ACOUSTIC BEACON</p>
<p>-S1820502-01/-02/-04 -S1821502-01/-02/-06 -S1822502-01/-02 -S1823502-01/-02/-03/-05 -S1824502-01/-02 -S1826502-02</p>	<p>ELT,KANNAD</p>
<p>-S1840501-01 -S1840501-04</p>	<p>ELT,KANNAD</p>

<b>-A3-06-2749-1</b>	<b>ARTEX ELT 1000</b>
<b>-453-6603 -453-6604</b>	<b>ARTEX ME 406 SERIES</b>
<b>-453-6611</b>	<b>ARTEX ME 406P</b>
<b>-453-5012</b>	<b>ARTEX G406-4</b>
<b>-453-5002 -453-5003</b>	<b>ARTEX C406-1 ARTEX C406-1HM</b>
<b>-453-5000 -453-5001</b>	<b>ARTEX C406-2 ARTEX C406-2HM</b>

<p>-453-5060 -453-5061</p>	<p>ARTEX C406-N ARTEX C406-N HM</p>
<p>-453-5004</p>	<p>ARTEX B406-4</p>
<p>500-12,16 AND 27 SERIES</p>	<p>ELT 500-12,16 AND 27 SERIES</p>
<p>-622-6524-001 / -622-6524-002 -622-6524-003 / -622-6524-004 -622-7318-001 / -622-7318-002 -622-7318-003 / -622-7318-004 -622-9976-001 / -622-9976-002 -622-9976-003 / -622-9976-004</p>	<p>DME INDICATOR IND-42( )</p>
<p>-622-6263-001 -622-6263-003</p>	<p>DME-42</p>
<p>ALL</p>	<p>PITOT-STATIC</p>
<p>-G8400            -G8400A10-24 -G8400A11-24   -G8400A12 -G8400A12-12   -G8400A13-24 -G8400A14-24   -G8400A15-24 -G8400A21-24   -G8400A22-24 -G8400A23-24   -G8400A24 -G8400A24-24   -G8400A3-12 -G8400A3-24    -G8400A31-24 -G8400A36-24   -G8400A37-24 -G8400A39-24   -G8400A41-24 -G8400A43-24   -G8400A45-24 -G8400A47-24   -G8400A49-24 -G8400A8-12    -G8400A8-24 -G8400A9-24</p>	<p>AIRCRAFT NAVIGATION ROTATING WARNING LIGHT G8400A</p>

<p>-120-21713-001  -120-21713-501  -120-44063-001  -120-44063-501</p>	<p>BACK UP POWER BOX</p>
<p>501-1228-01,-02,-03,-04,-05,-06,-07</p>	<p>EMERGENCY POWER SUPPLY PS 835( )</p>
<p>-120-29967-001  -120-34428-001  -120-34428-501  -120-34428-503  -120-34428-505  -120-34428-507</p>	<p>WARNING PANEL</p>
<p>-120-29833-005 -120-42642-507  -120-29833-009 -120-44590-001  -120-42642-001 -120-44590-501  -120-42642-501 -120-64207-611  -120-42642-505 -120-64207-613  -120-64207-615</p>	<p>FLAP SELECTOR LEVER</p>
<p>-120-28093-001  -120-28093-501  -120-42621-001</p>	<p>FUELING CONTROL PANEL</p>
<p>-120-25226-501 -120-38594-503  -120-25226-503 -120-38594-505  -120-38594-001 -120-38594-507  -120-38594-401 -120-38594-501</p>	<p>LANDING GEAR CONTROL BOX</p>
<p>-120-25262-001 -120-61110-001  -120-25262-501 -120-64073-001  -120-43270-001 -120-43270-501  -120-50642-001</p>	<p>LANDING GEAR RELAY BOX</p>

<b>-120-27361-001</b> <b>-120-27361-501</b>	<b>STEERING RELAY BOX</b>
<b>-120-24903-501</b> <b>-120-37995-001</b> <b>-120-37995-501</b>	<b>STEERING HANDLE</b>
<b>-20500-SERIES</b>	<b>FEEDBACK POTENCIOMETER BOX</b>
<b>-120-64199-001</b> <b>-120-64199-501</b> <b>-120-64349-001</b>	<b>LOW-SPEED ALARM PANEL</b>